

***GPNP Inc.***

**NT512 NT1  
User Manual**

Revision 1.00  
17/6/2002

Information in this guide is subject  
to change without notification.

Copyright 2002 GPNP Inc. U.S.A.

## **IMPORTANT SAFETY INSTRUCTIONS**

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons. The precautions are listed below.

1. Avoid installing phone line or using a telephone (other than a cordless type) during a lightning storm. There may be a remote risk of electric shock from lightning.
2. Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
3. Do not use this product near water (for example, near a wash bowl, in a wet basement or near a kitchen sink).
4. Never touch un-insulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
5. Use only the power cord, power supply indicated in the manual.

## **FCC INFORMATION**

### **FCC part 15, Class B**

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

### **FCC part 68, Class B**

1. This equipment complies with Part 68 of the FCC rules. On the bottom of the equipment housing is a label that shows the FCC registration number for this equipment.

### **Certified CAN/CSA STD C22.2 No. 950**

### **DOC CS03**

This device must be powered by a CSA approved power supply meeting the requirements of CS03, Part I Section 1.4.2.

### **CONFORMS TO ASNI/UL STD 1950.**

## **WARRANTY AND CUSTOMER SERVICE**

### **LIMITED PRODUCT WARRANTY**

GPNP Inc. warrants that for two years from the date of shipment to Customer, all products manufactured by GPNP Inc. will be free from defects in materials and workmanship.

This warranty applies only to the original purchaser and is not transferable without GPNP Inc.'s permission.

This warranty becomes null and void if Customer modifies or alters the equipment in any way.

### **Repair and Return**

GPNP Inc. will repair or replace this product within two years from the date of shipment if it does not meet its published specifications or fails while in service.

If GPNP Inc. Technical Support determines that a repair is needed, Technical Support will issue an Return Material Authorization (RMA) number.

Return Material Authorization (RMA) is required prior to returning equipment to GPNP Inc

Identify the RMA number clearly on the package (below address), and return to the GPNP Inc.'s customer support department.

**Technical Support**

If you experience technical difficulty with the NT512 please contact GPNP, Inc. at 408-245-0388 or [support@gnp.com](mailto:support@gnp.com) for technical support.

# Table of Contents

Important Safety Instructions	1
FCC Information	2
Warranty and customer service	3
Introduction	7
Package Contents	9
First thing first– Before the installation	10
LED Indicators	11
Interface and Connectors	11
DIP Switch Setting for the typical Configuration	12
Install NT512	13
Powering with the Power Supply	14
Connecting with the Network Interface Outlet	15
Connecting the Terminal Equipment	16
Maintenance	17
Remote Loop Testing	17
Troubleshooting	17
Specifications	19

## Figures

Figure 1. GPNP Inc NT512.	7
Figure 2. Power and Interface Connectors.	8
Figure 3. Typical Connection.	13

## Tables

Table 1. Power Supply Information.	9
Table 2. LED Status.	10
Table 3. U Interface Pin Assignments.	11
Table 4. ST Interface Pin Assignments.	11
Table 5. DIP Switch Position Assignments.	12

## Introduction

The GPNP Inc. NT512 is a stand-alone device providing up to four basic rate interfaces between customer ISDN terminal equipment (S/T) and the basic rate ISDN network (U).

Figure 1 is a picture of the NT512.



Figure 1. GPNP Inc NT512.

Figure 2 shows the power and interface connectors at the rear panel of NT512.



**Figure 2. Power and Interface Connectors**

The left four RJ-45 connectors labeled **U** connect to the ISDN network. The RJ-45 connectors labeled **S/T** connect to the terminal equipment.

The NT512 is powered by an external power supply, which comes in two types. The type of power supply can be chosen by customer depending on the different operating environment:

The **40 Watt power supply** provides up to 40 watts of Power Source 2 (PS2) power which is commonly used to power Terminal Equipment from the NT1 device. Most ISDN Telephone sets, including those with built in data capabilities, require PS2 power. The specifications or documentation of the TE will have information on the watts required by the device

The **10 or 16 Watt power** supply is normally used for Video Conferencing and, Data Equipments requiring no PS2 to function.

Unit	Input	Output
10Watt	100~240VAC@50~60Hz	+40VDC@250mA
16Watt	120VAC@60Hz	+48VDC@250mA
40Watt	90~264VAC@50~60Hz.	+42VDC@1A

Table 1. Power Supply Information

## Package Contents

After unpacking the NT512, please carefully inspect it for shipping damage. If damage is suspected, file a claim immediately with the carrier and contact GPNP Inc. Technical Support department.

The NT512 package includes the following items:

- One NT512 NT1 device**
- Four RJ-45 to RJ-45 cables**
- Four RJ-11 to RJ-45 hybrid cables.**
- One power supply (10Watt/16Watt or 40Watt)**
- Manual**
- Warranty Card**
- Wall-Mounting Kit (Optional)**

If anything is missing, please contact GPNP Inc Technical Support department.

## First thing first – Before the installation.

Before installing the NT512, the following items should be checked:

- LED Indicators
- Interface and Connectors
- DIP switch Setting.

### LED Indicators

There are a total of five LED indicators (One POWER indicator and four **LINE** indicators) located on the front panel of the NT512. With these LED combinations, the user can easily to understand the current status of the NT512. Table 2 describes the status and descriptions of the LEDs

**Table 2. LED Status.**

LED type	STATUS	Description
<b>POWER</b>	<b>Solid Green</b>	<b>The unit is powered</b>
<b>LINE</b>	<b>Faster flash</b> Green (8 times per second)	<b>Waiting U interface synced.</b>
	<b>Slower Flash</b> Green (1 times per second)	<b>U is synced. Waiting ST interface ready</b>
	<b>Solid Green</b>	<b>U and ST are synced. The unit is ready to establish an ISDN connection.</b>

### Interface and Connectors

Two types of interface connectors, **U** and **ST** interface connectors, which located at the rear panel, are provided by the NT512 unit. The U interface complies with ANSI T1.601 and ITUT1.430 Recommendation Standard. The S/T interface complies with ANSI T1.605 and ETSI ETS 300012 Standard. Table 3 and 4 show the interface pin assignments.

**Table 3. U Interface Pin Assignments**

Pin #	Description
1	- (*Note)
2	-
3	-
4	U Network connection (Tip)
5	U Network connection (Ring)
6	-
7	-
8	-

\* Note: “-” Stands for No Signal for connection.

**Table 4. ST Interface Pin Assignments**

Pin #	Description
1	-
2	-
3	ST interface Receive (RX+)
4	ST interface Transmit (TX+)
5	ST interface Receive (RX-)
6	ST interface Transmit (TX-)
7	GND for 40VDC
8	40VDC

### DIP Switch setting for the typical configuration.

There are four sets of five DIP Switches on the bottom of the NT512, each corresponding to the appropriate line. The DIP Switches allow the user to adjust the S/T bus Terminating Resistor (TR) and S/T bus timing.

Details of each DI P Switch are given in Table 5. The asterisks represent the default positions.

Setting	1	2	3	4	5
None	---	Off	Off	Off	Off
50	---	On	On	On	On
100	---	Off*	Off*	On*	On*
Adaptive	Off*	---	---	---	---
Fixed	On	---	---	---	---

*Table 5. DIP Switch Position Assignments*


Since most Terminal Equipment (TE) requires 100 Ohm termination, the NT512 is being set as standard 100 Ohm termination. This default DIP switch setting should be able to work on almost all situations.

Any other configuration, for example TE requiring 50 Ohm termination, please studies its manual and then adjusts the DIP switch according to the instructions.

## Installing NT512

After make sure that terminal equipment (TE) is properly terminated and finishing the adjustment of DIP switch setting of NT512 if necessary, we can start installing the NT512.

The typical connection of NT 512 with ISDN terminal equipment (TE), such as video conference equipment or ISDN Telephone set, is shown in Figure 3.

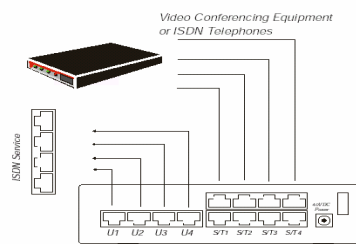

## **I. Powering with the Power Supply**

To connect the NT512 to an external power supply, perform the following steps

1. Connect the external power supply to the NT512 at the POWER jack located on the rear panel.

2. Plug the power supply into the nearest wall outlet supplying 120 VAC, 60 Hz.

3. On the NT512, verify that the POWER LED indicator is illuminated green and stay solid indicating the NT512 is working.

4. All the LINE LED indicators should flash green once to indicate that each interface is receiving power.

5. After approximately 3~5 seconds, the LINE LED indicators should flash at eight times per second (8 Hz rate) while trying to synchronizing with Central Office (CO).

Should any of the indicators fail to operate as stated, Please see the section Troubleshooting on page 17.

## **II. Connecting with the Network Interface Outlet**

Use the RJ-11 to RJ-45 hybrid cables to connect the NT512 with Network Interface Outlet.

1. Connect the RJ-11 end of the hybrid cable to the U Network Interface Outlet which is usually provided by Telephone Company.
2. Connect the RJ-45 end of the hybrid cable to the U Network Interface connector on the NT512.
3. The LINE LED indicators should flash once per second (1 Hz rate) to indicate the U-Interface has synchronized with Central Office (CO) after a slight delay.

If the LINE LED indicator fail to operate as stated, Please see the section Troubleshooting on page 17.

### **III. Connecting the Terminal Equipment**

Use the RJ-45 to RJ-45 cables to connect the NT512 with Terminal Equipment (TE).

1. Plug the TE into the ST connectors at the rear of the NT512.
2. After a few seconds, the LINE LED indicator should stop flashing and illuminate solid green to indicate the TE has synchronized with Central Office.
3. The installation is complete and the NT512 is fully working now.

If the LINE LED indicator fail to operate as stated, Please see the section Troubleshooting on page 17.

#### **\*Note**

In order to achieve this synchronization, the TE should do the necessary setting. For instance, running software to set up the switch type and SPID for the equipment. Please read the TE's user's manual to do the necessary setting.

## Maintenance

The NT512 requires no routine maintenance to operate.

## Remote Loop Testing

Network test features include a Metallic Loop Test (MLT) initiated at the central office. This test is a lower power signal transmitted from Central Office (CO) and the NT512 will loop the signal back to the CO. It confirms network integrity to the NT512.

## Troubleshooting

Please check the lists of situations and solutions below if your NT512 does not operate properly.

Situation	Possible solutions
<b>POWER</b> and <b>LINE</b> LEDs are not illuminated.	<ul style="list-style-type: none"><li>• Verify external power connection.</li><li>• Call Technical Support for assistance.</li></ul>
<b>LINE</b> LED indicators flash faster than an 8 Hz rate.	<ul style="list-style-type: none"><li>• ISDN line not plugged into <b>U</b> jack: Plug ISDN line into <b>U</b> jack.</li><li>• Wall jack wiring is incorrect: Check wall jack.</li><li>• Problem with ISDN line: Contact Telephone company.</li><li>• Call Technical Support for assistance.</li></ul>

<p><b>LINE</b> LED indicators flash at slower than a 1 Hz rate.</p>	<ul style="list-style-type: none"> <li>• TE not connected properly: Connect TE.</li> <li>• TE not terminated properly: Adjust termination.</li> <li>• TE needs PS2 power from NT512: Using 40 W external Power Supply.</li> <li>• Call Technical Support for assistance.</li> </ul>
<p>Unable to make or receive a call.</p>	<ul style="list-style-type: none"> <li>• TE ISDN parameters not configured properly: Re-configure TE, such as setting of switch type, SPIDs, DN, etc...</li> <li>• TE is not compatible with ISDN network: Contact Telephone company.</li> </ul>

## Specifications

### **Mechanical**

Size: 2" High, 6.4" Wide x 7.5" Deep  
(5.08 cm, 16.26 cm, 19.05 cm)  
Weight: 2 lbs (0.91 Kg)  
Mounting: Wall or desktop

### **Front Panel Indicators**

POWER LED X1  
LINE LEDs X4

### **Network Compatibility**

U-Interface .....ISDN U  
S/T-Interface .....ISDN S/T

### **Network Interface (U)**

Line: 2-Wire (Tip and Ring)  
Operating Mode: Full-Duplex  
Data Rate: 144 kbps to customer  
Line Code Format: 2B1Q  
Output Amplitude: 2.5 volts, zero-to-peak  
Connectors: RJ-45  
Tx Source Impedance ...As per ANSI T1.601  
Rx Source Impedance...As per ANSI T1.601  
Receiver Sensitivity.....As per ANSI T1.601

### **Customer Interface (S/T)**

Line: Four-Wire.

Operating Mode: Full-Duplex

Data Rate: 144 kbps to customer

Line Code Format: Alternate Mark Inversion (AMI),  
100% duty cycle

Output Amplitude: 0.75 volt, zero-to-peak

Connector: RJ-45

Tx Source Impedance ...As per ANSI T1.605

Rx Source Impedance...As per ANSI T1.605

Receiver Sensitivity.....As per ANSI T1.605

### **Power Supply Specifications**

Power Input: 110 VAC, 60 Hz

Power Output: 10/16 W or 40 W

Output Voltage: 40 ~ 48 VDC, 250 mA (10/16 W PS)  
42 VDC, 1A (40 W PS)

### **Environment**

Operating Temperature: 0 to 50 °C (32 to 100 °F)

Storage Temperature: -20 to 60 °C (-4 to 140 °F)

Relative Humidity: Up to 95%, non-condensing.